



« 1997 Town Car Table of Contents »

«Group 01: BODY»

«Section 01-14: Door Lock Control System, Electronic»

«REMOVAL AND INSTALLATION»

Latch and Lock, Luggage Compartment Door


Removal

1. Open luggage compartment door (40110).
2. Remove luggage compartment door latch retaining screws and disconnect electrical connector. Remove luggage compartment door latch (43200).
3. Drill out two rivets retaining sleeve and cover of luggage compartment lock cylinder to luggage compartment door outer panel. Remove sleeve and cover.
4. Remove glove/luggage compartment lock cylinder (43507), luggage compartment door lock retainer clip (40182) and luggage compartment door lock support (432A48).
5. Remove rivet retaining luggage compartment lock cylinder and luggage compartment door lock cylinder retainer (43629).
6. Remove luggage compartment lock cylinder and luggage compartment door lock cylinder retainer.


Installation

1. Follow removal procedure in reverse order.
2. Tighten luggage compartment door latch retaining screws to 9-14 N-m (7-10 lb-ft). Tighten luggage compartment door lock cylinder plate retaining screw to 5-8 N-m (45-71 lb-in).
3. Adjust as described.

Luggage Compartment Lock Cylinder

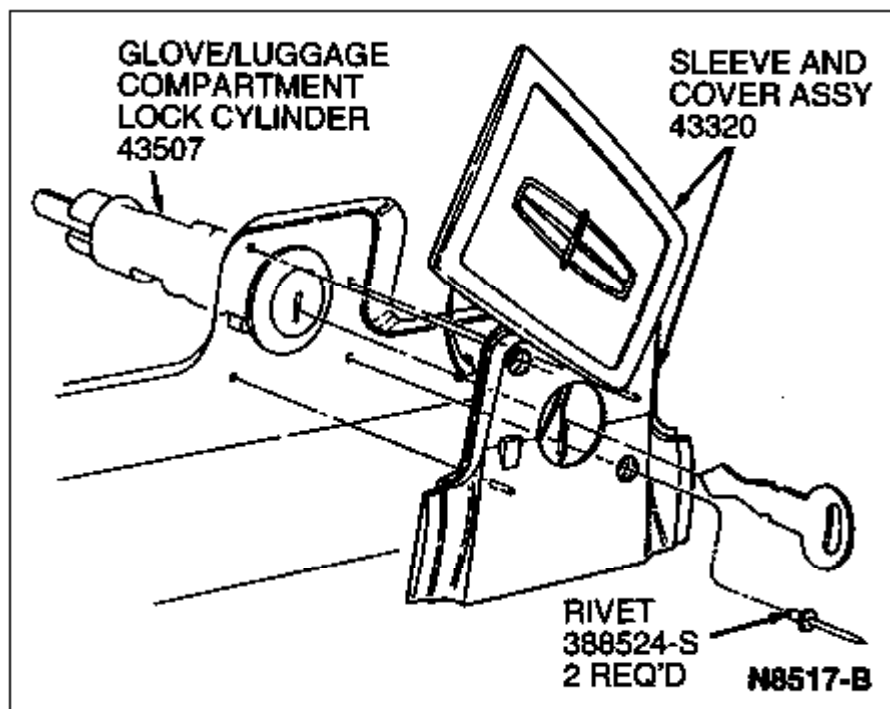

Luggage Compartment Latch and Lock

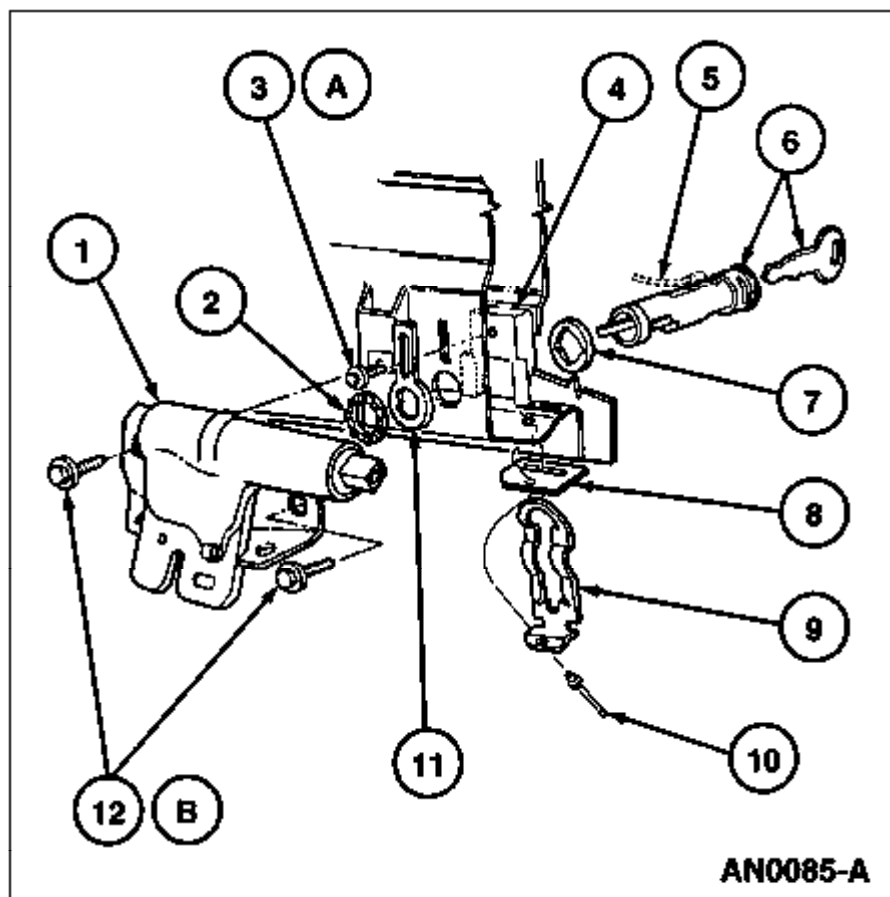

Item	Part Number	Description
1	43200	Luggage Compartment Door Latch

2	40182	Clip
3	N602701-S2	Screw and Washer
4	432A48	Luggage Compartment Door Lock Support
5	220A40	Door Lock Cylinder Switch (Lock Tamper Switch)
6	43507	Glove/Luggage Compartment Lock Cylinder
7	43625	Luggage Compartment Door Lock Cylinder Sleeve Pad
8	433A28	Luggage Compartment Door Lock Cylinder Retainer Seal
9	43629	Luggage Compartment Door Lock Cylinder Retainer
10	375203-S36	Rivet
11	43627	Luggage Compartment Door Lock Cylinder Plate
12	N606675-S36	Screw and Washer (2 Req'd)
A	--	Tighten to 5-8 N-m (45-71 Lb-In)
B	--	Tighten to 9-14 N-m (62-124 Lb-In)

